

Instructions For Use

Spare blade compartment

Integrated film cutter with changeable cutter

Release Pin for changing film cutters

Ergonomic handle for a wide range of users

Operating button safety lockout retracts main blade when film cutter is used

2 tray cut positions

Blade release lever

Blade exposure safety window

Blade change position

Tape splitter cuts tape without using blade

Top cut for boxes

Easily Cuts Shrink Wrap*



Blade Change


Using the single-notch blade (SP0-17)



Press blade release lever and push blade carriage button forward.



Lift blade off alignment tab. Reload using alignment tab to position blade.

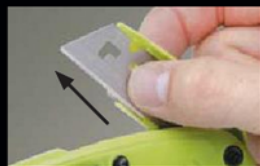

To remove blades from blade storage compartment press from behind with index finger and slide blades forward and out with thumb.

S5™ Safety Carton Cutter

Using the Film Cutter




To release film cutter slide operating button "down and back," away from the blade. Film cutter will pop open. This locks out the box cutting mechanism.



Pull film cutter out and rotate 180 degrees until it stops.



Proper hand position for using film cutter.

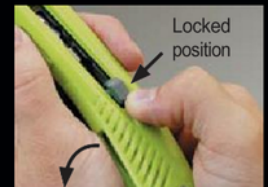

Box cutter lock-out (in film cutter mode) locks box cutting blade in closed position when cutting film. To resume box cutting, fold cutter back into body. Button audibly clicks into place.

Film Cutter Replacement (55FC-3PK)



**The film cutter is designed for cutting plastic shrink wrap. Minimize twisting motions while cutting to avoid breakage. Using the cutter to cut plastic banding will increase the wear on the blade. Warning: Do not cut metal banding as it was not designed for this purpose.*



Easy cutter replacement Apply pressure to release pin with pointed object (pen) and remove film cutter. Reinstall in reverse order.



Slide film cutter in horizontally until hole aligns with release pin. Press bottom of release pin to lock and secure film cutter.

